

1. DOWNLOAD THE DEMO

(IF YOU ALREADY HAVE AN ACCOUNT OR REGISTER ON <http://support.prime-proof.com/register>)

Download via Support-Website



<http://support.prime-proof.com/>



Prime Proof	Note	Mac	Win
Prime-Proof 5.0.0 (8358)			


3. ADDING PRINTER

▶ Printer has to be online ◀

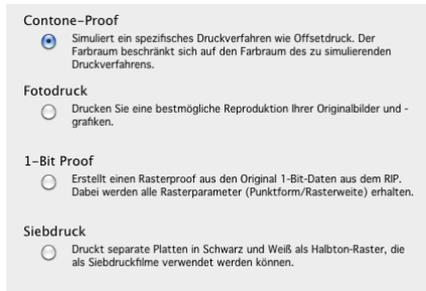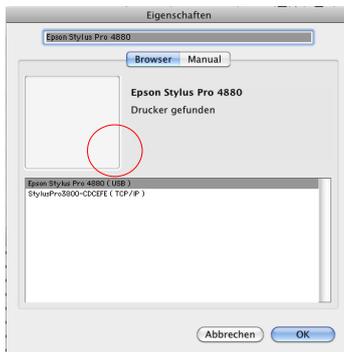

Make your settings.

Most important:

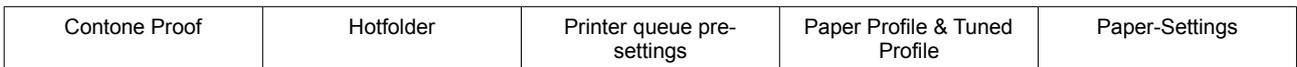


4. ADDING JOB

In this demo you have to add a job via the editor!
Adding a job directly from the RIP is not possible with the demo version.



Open the "Editor"




"Place" your file

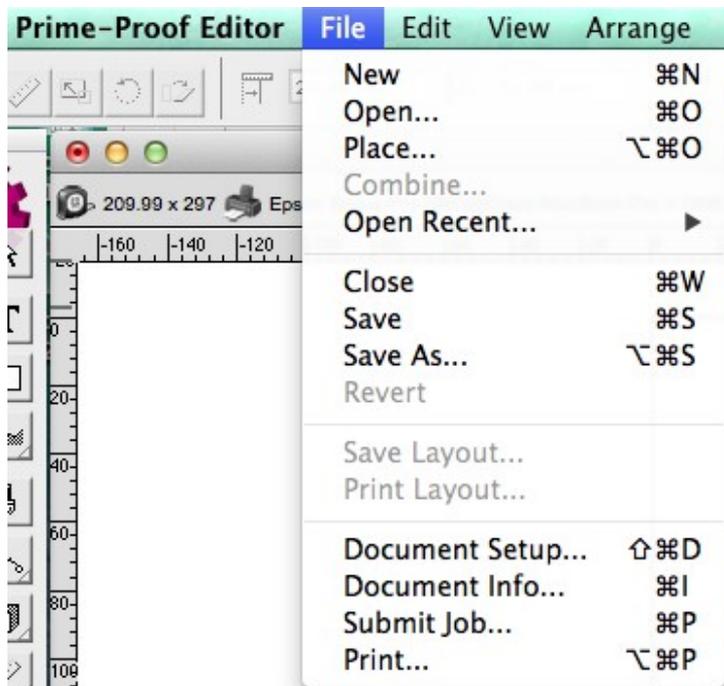

Check you settings like reference profile, printer queue etc.

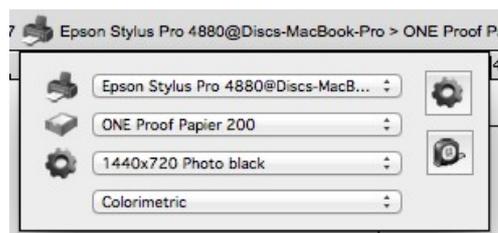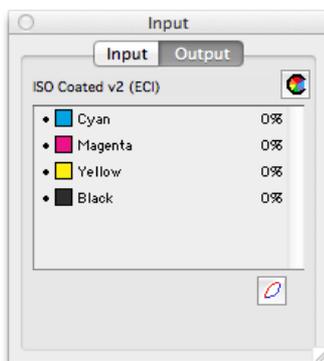

click the arrow to send the job to the RIP

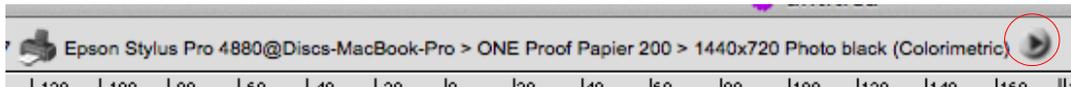


check your printer queue




► If the print job does not start please check the small icons (play/pause) on the top of the rows ◀



for certification print choose a color strip from the drop down menu in the top right of "Prime-Proof Layout"

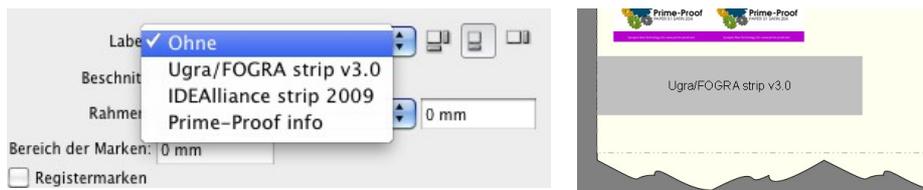

import your measurement results by clicking "Measure" or "Messen" and "Next"

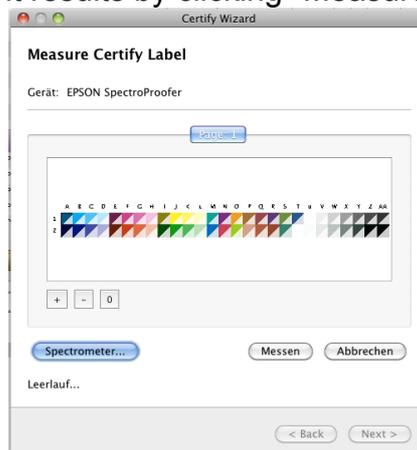

click "Next" at least 2 times

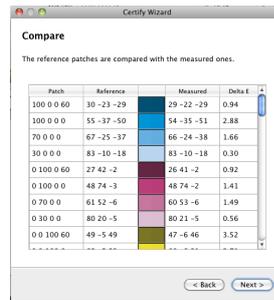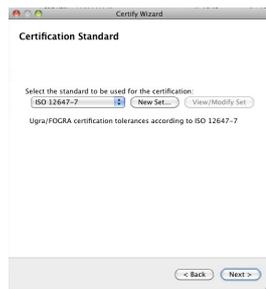


If everything is OK your certification print was successful.
If not, you have to do a Device-Link.




5. Device-Link


Right click on the printer queue and choose "Recalibrate Profile" or "Profil rekalisieren"

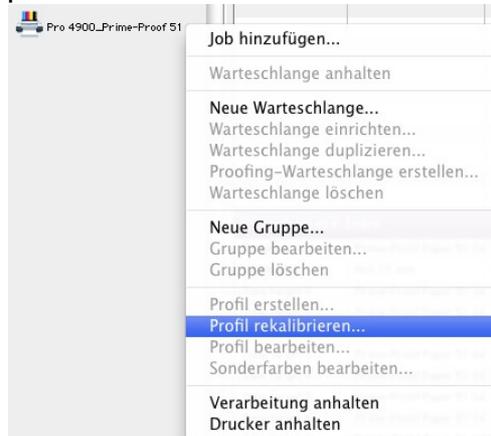


Select the right settings

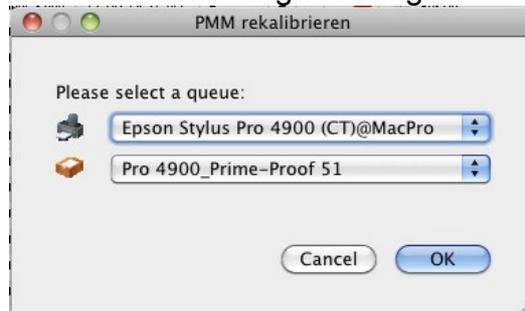

Set a name for the tuned profile and print a target

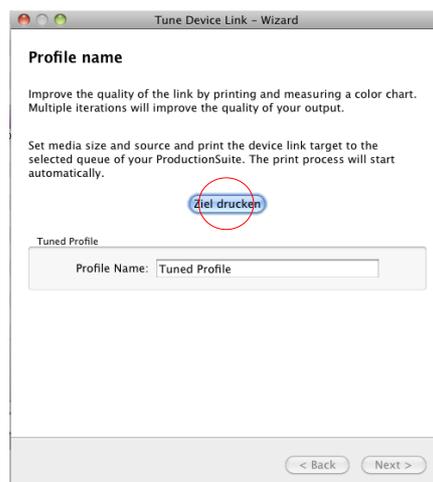

Import your measured values and click "Next"

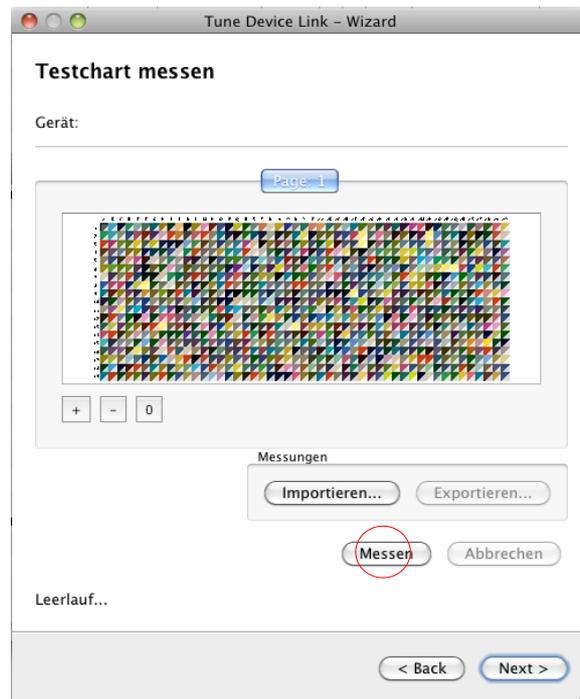

Check the values. If OK click "Finish".
If not OK click "Refine" and do an additional Device-Link.

